

Fold-A-Goal

Permanent Rugby Goals with Ground Sleeves


Assembly Instructions

Assemble by sliding the pieces together as shown.
Split washers go on screw first, then flat washers.
The goal slides over the insert which slides into the ground sleeve.
The ground sleeve is to be set in concrete.

Call for FREE safety labels to affix to goals.

Ground Sleeve Installation Instructions

- 1 Dig a hole 4 feet deep and 1.5 feet wide
- 2 Pack gravel into the base of the hole to stabilize the ground sleeve
- 3 Make sure the sleeves are level with the ground before permanently installing
- 4 Before cementing ground sleeves make sure the posts slide easily in and out of the sleeves
- 5 Cement posts into the ground with the caps on and allow to set for at least 24-48 hours or until ready
- 6 Crossbar should be 9'10" from the ground to the bar
- 7 Installation should be performed by a qualified contractor

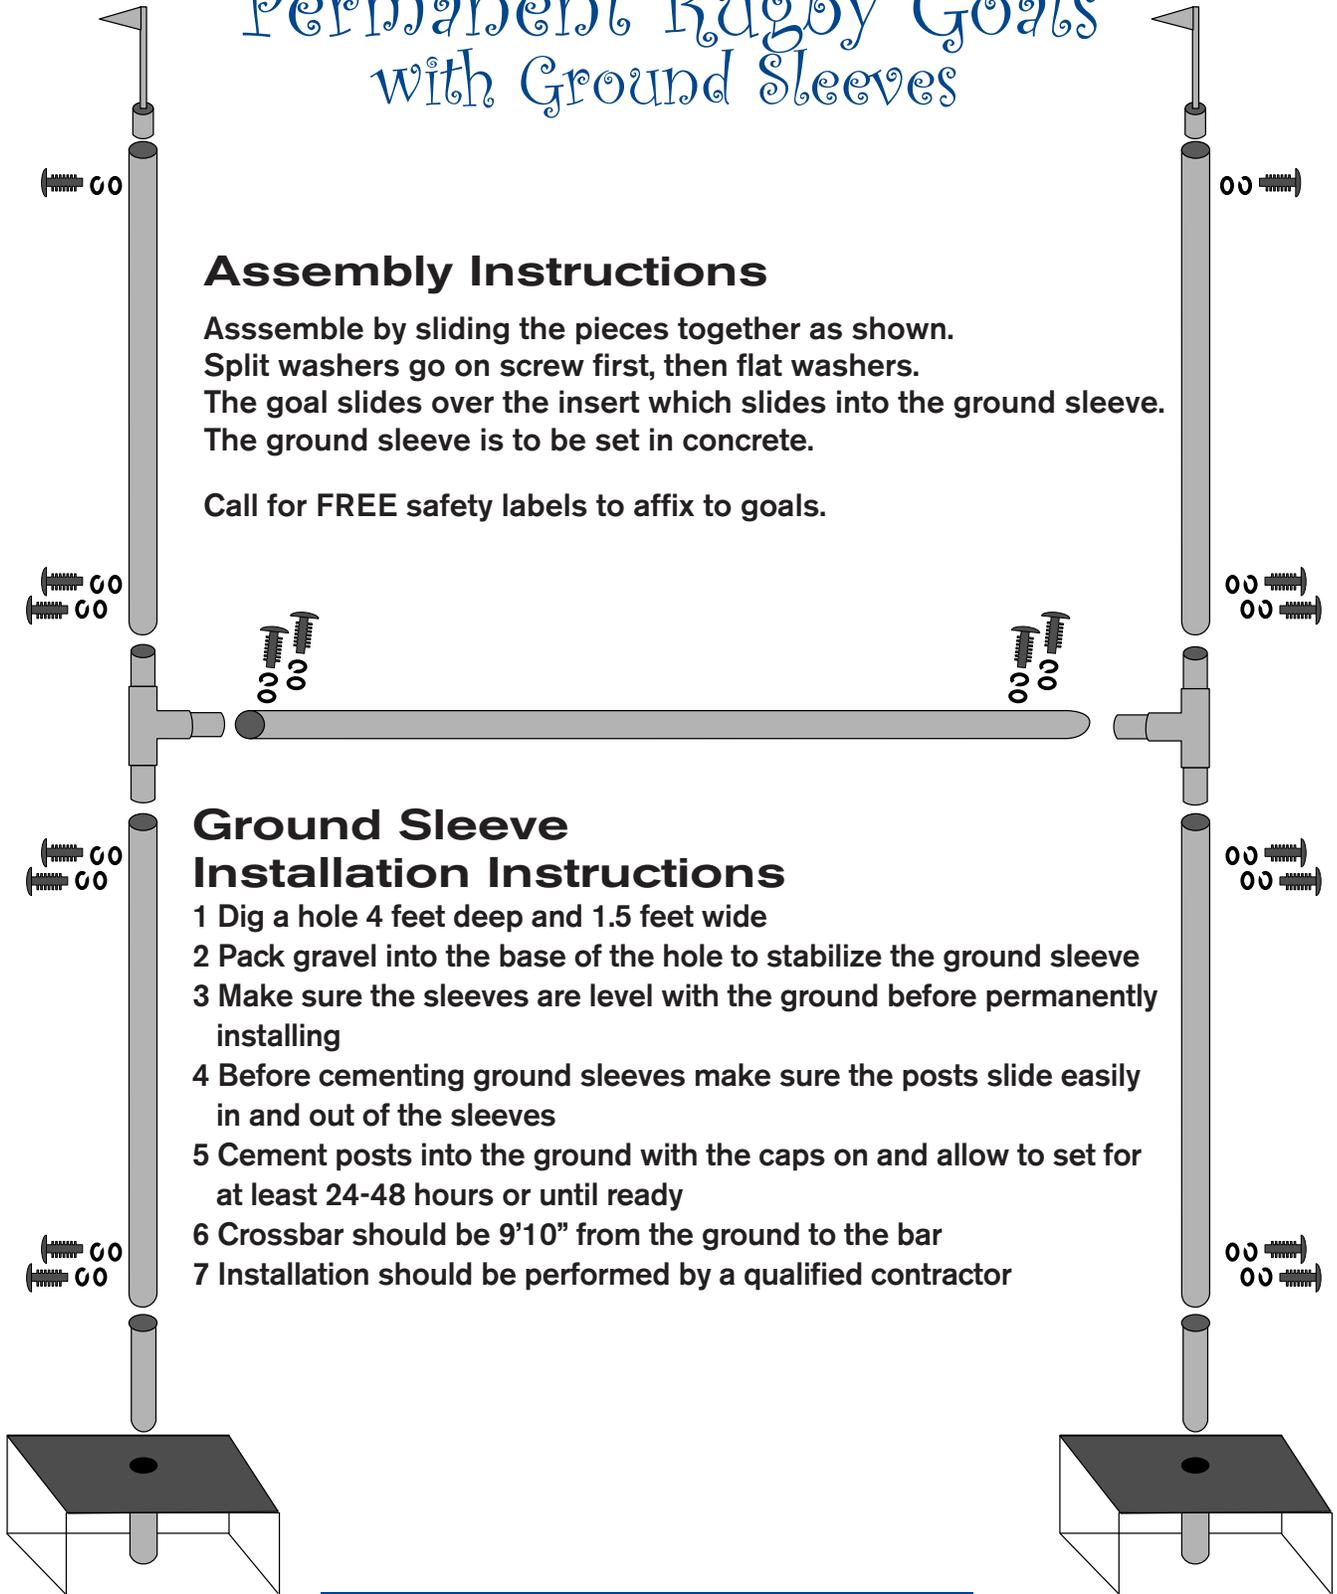

www.fold-a-goal.com
info@fold-a-goal.com